

Shanghai Anping Static Technology Co.,Ltd

# Self-cleaning Desktop Ionizing Air Blower





Suitable for electronics, optoelectronics, semiconductor and other industries

# Effectively solve the problems caused by static electricity











Prevent adhesion of objects

Prevent material splash

Prevent static electricity Preven


Prevent blockage of feeder







Speciality Creates Value

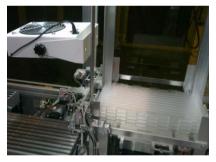




## High Efficiency Static Removal

Keep a clean production environment and stay away from static electricity

#### Discharge effect

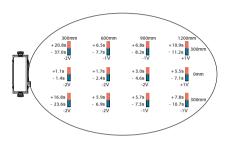

Test standard: ANSI/ESD.STM3.1, SJ/T 11446-2013

Test instrument: Trek 157 static tester

Test voltage: ±1000V → ±100V attenuation


Test environment: humidity 50±5%; temperature 23±3℃

The test data as follows (test distance: 300mm in front, maximum air volume):



#### Working way

The ionizing air blower adopts the synchronous emission technology of positive and negative ions, which use two sets of independent emitter electrodes to generate a direct current corona discharge to produce a large number of positive and negative air ions, which are blown by the axial fan to the surface of objects with electrostatic to be eliminated. It is suitable for electronics, optoelectronic, semiconductor, plastic, film, printing and other industries.

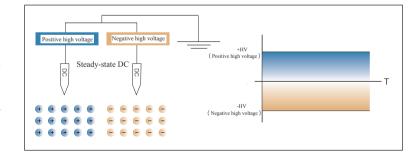

### Features

#### Safe / Easy to use / Durable





#### Automatic needle brushing

Automatic needle brushing function when start up. By default, the needle is automatically brushed every 8 hours for manual cleaning and maintenance free.



#### Standard tungsten alloy needle

Longer life time compare to titanium and silicon materials.







#### Dedicated external power adapter

INPUT: 100-240V 50/60Hz; OUTPUT: DC15V 1000mA



#### CE certification


CE certified which is a high-security and high-reliability static eliminator.



# Product specifications


Product details / Product specifications / Product size

#### Product details

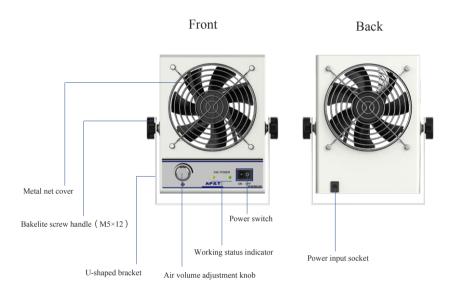

#### Product size

Unit: mm

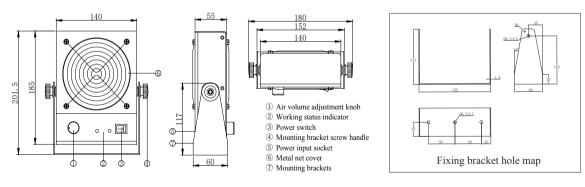

Model	AP-DC2451-001		
Input voltage	15V		
Power	9W		
Working voltage	±DC4000-DC7000V		
Ion emission	Steady-state DC		
Emitter electrode	Tungsten Alloy		
Discharge structure	Uncoupled electrical contact (discharge cylinder)		
Discharge range	750*300mm (L*W)		
Discharge speed	$\leq$ 2.0s ( 300mm away from the air outlet )		
Ion balance	$\leq$ $ \pm 10V $ ( 300mm away from the air outlet )		
Alarm indicator	The power indicator light on indicates working normally		
Air volume	≤ 89.1CFM		
Noise	$\leq$ 43db (1m away from the air outlet)		
Ozone thickness	$\leq$ 0.05ppm ( 150mm away from the air outlet )		
Working temperature	0-50℃		
Working humidity	30-70%RH		
Dimensions	140*55*185mm (L*W*H) (Blower body size)		
Shell material	Aluminum powder spray		
Power adapter	INPUT: 100-240V 50/60Hz;		
Packaging accessories	OUTPUT: DC15V 1000mA  1 pair of U-shaped aluminum spray powder mounting bracket,		
Net weight	1 pair of bakelite screw handles (M6×12)  1500g (Including 1 external power adapter)		
Gross weight	1980g (Heritating Fexicinal power adapter)		
Warranty	1Year		
Certification	CE		
	·-		

#### **Products Use**


Step of use/Installation position/Packing accessories

#### Step of use



Take out the power adapter from the packing box and connect the ionizing air blower.


Place the ionizing air blower close to the working area (about 300~750mm away from the object with electrostatic to be eliminated), and the air outlet of the ionizing air blower must be vertically aligned with the object to be eliminated.

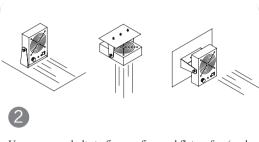


Use screws or bolts to fix on a firm and flat surface(such as a wall or shelf). The angle of ionizing air blower can be adjusted by the knobs on both sides of the bracket to achieve the best static elimination effect.

#### **Installation** position

 1. Place the ionizing air blower in the working area where static electricity is to be eliminated. And the installation angle should be perpendicular to the surface of the charged body and about 300 to 750 mm away from the static electricity object.



 - 2. Ionizing air blower should be at least 30cm away from the metal conductor and metal grounding body.
- 3. Two ionizing air blowers should be installed side by side with an interval of more than 400mm and more than 200mm away from obstacles such as walls.



4. The air inlet is at least 150mm away from the wall.



#### Packing accessories

Part name	Picture	Part No.	Specification
Switching power adapter (national standard plug)		AP4705000	DSS28-1502000-A 100-240V 1.0A 50/60HZ DC15V-2.0A wire length 2m

#### ♠ Safety warning

- 1. Read the operating instruction carefully before installing and using the device.
- 2. Do not insert foreign objects into the inlet or outlet of the ionizing air blower.
- 3. Do not use the device when the humidity is higher than 70%.
- 4. Do not use the device in inflammable and explosive environment.
- It is strictly forbidden to disassemble products without authorization. Internal maintenance and repair must be carried out by professional personnel.
- 6. The product is strictly prohibited to touch liquid during use, otherwise there will be abnormal, resulting in electric shock or fire.
- 7. Power must be turned off during inspecting or replacing the product, otherwise it may cause electric shock or fire.
- 8. The product is specially designed for removing static electricity and is strictly prohibited for other purposes. Any abnormal use may cause machine failure, electric shock, fire and other hidden dangers.
- It is strictly forbidden to touch the electrode needles when power is on, otherwise it is easy to cause fault and electric shock accident.
- 10. Discharge needle is a sharp metal object, please use it with care.
- 11. Please check the specifications of the power supply before powering on the product. Any power supply that does not meet the specifications may cause damage or even failure to the product.
- 12. Check the power cord regularly. If it is damaged, replace it immediately; otherwise, leakage and abnormal operation may occur.

#### ⚠ Trouble shooting

NO	Problems	Reasons	Solutions
The indicator on the fan panel is off	Poor contact of the power cable	Check whether the power cable is in good condition and securely connected	
	Power supply mismatch	Confirm the power supply specification (INPUT: 100—240VAC 50/60Hz; OUTPUT: 15VDC 2000mA)	
The electrostatic removal performance is obviously reduced	Discharge needle is polluted and damaged	Clean or replace the discharge needle	
	1 1	Bearing set of ionizing air blower is improper	Confirm the best bearing set
3	The electrostatic removal performance is reduced	There are conductors or other ionizing air blowers around	Remove (moving) conductors or other ionizing air blowers
4 Unable to disc	Unable to discharge	High voltage module is damaged	Return to factory for maintenance
	Chable to discharge	Main-board chip is damaged	Return to factory for maintenance
5	The product is smoky or burnt	The main control board components are burnt out	Return to factory for maintenance

#### 

- 1. The ionizing air blower should be cleaned and maintained in time according to the use environment and the required electrostatic protection requirements in order to ensure the good performance of the product. That is, gently remove the carbon deposits on the discharge electrode and metal net cover with electrostatic brush, dust-free cloth dipped in anhydrous alcohol. Note:
  - A. Operation must be done 10 minutes after power cut off.
  - B. It must be cleaned when dust or white stuff appear on the tip of the needle during use.
  - $C_{\infty}$  The ionizing air blower must be powered on after alcohol is completely volatilized after cleaning. No other organic solvent can be used to clean the ionizing air blower.
  - D. The alloy electrode is a consumable product which is not included in the scope of warranty and will be charged for replacement when repairing
- 2. Do not press or rotate the control buttons on the fan panel too hard; otherwise, the device will be permanently damaged.
- 3. If the working indicator light on the front panel of the fan is off or red, it should be stopped and repaired by professional maintenance personnel. It can be used only after the electrical performance index is normal.

#### 

- 1. AP- DC2451-001 self-cleaning desktop ionizing air blower has undergone rigorous testing and aging treatment before ex-work. Its performance has completely reached the relevant indicators marked in the usage instruction.
- 2. AP&T makes a commitment to the customer that any defective parts inspected by AP&T will be repaired or replaced free of charge within one year from the date of purchase. However, this commitment does not apply to: The device is incorrectly used or installed; Damage caused by negligence or accident during use; Modified, disassembled or repaired by other service departments not authorized by Anning Company.
- 3. AP&T shall not be liable for any incorrect use of the products except for repair or replacement of parts as specified above.



## AP&T

Professional electrostatic intelligent monitoring/analysis and elimination solution provider

# Speciality Creates Value

#### Shanghai Anping Static Technology Co.,Ltd

Tel: +86-21-64517676

Fax: +86-21-64517673

Postcode: 200233

Website: www.ap-static.com

Address: 3/F,Building 27,No.69,Guiqing Road,Shanghai,China



AP&T